 


FMA®

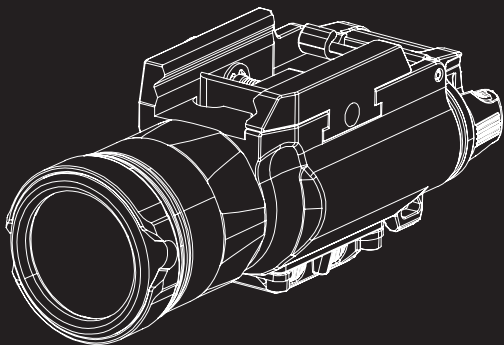

FX35 Ultra-High Dual Output Holster Tactical Light

FX35超亮双模快拔战术灯


www.fma.hk / TB1477

Product description



The FX35 tactical flashlight is a product specially optimized for some special holsters, with enhanced usability in operation. The switching of modes and power is done in the same location, making it extremely convenient to operate. With two power brightness settings, high power at 900 lumens and low power at 350 lumens, it covers most daily scenarios with steady and strobe modes. Additionally, this tactical flashlight is waterproof to IPX5 level, allowing it to be used in high humidity environments, withstanding rain and wind in daily use without any issues. The bottom rail system is compatible with most Picatinny rail specifications, requiring just one screw for attachment. This is a highly practical flashlight, especially when used with its specific quick-draw holster to achieve quick-draw and light activation.

Parameter information

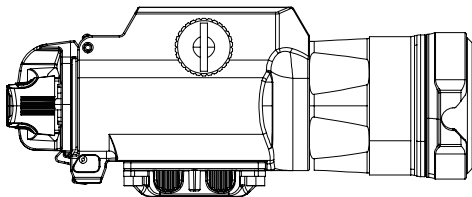

Size	97*39.5*36.7mm
Weight	110g (excluding batteries)
Material	Aluminum Hard Anodized
Battery	CR123A*2
Battery Life	1 hrs (High) , 2.5hrs (Low)
Lumen	900lm/350lm
Modes	Strobe/illumination
Liquid intrusion protection	IPX5
Operating temperature	-20°C to 40°C
Storage temperature	-20°C to 50°C


Key description

LED Illumination

Strobe

High Power

Switch

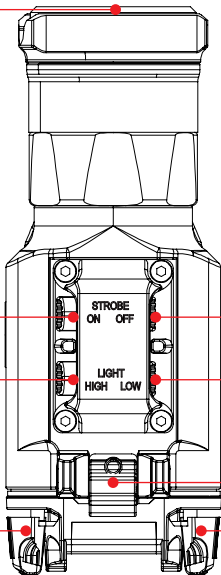


Illumination

Low Power


Latch

Switch

Battery assembly method

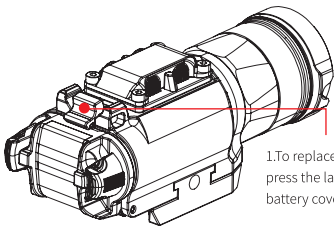

1. To replace the battery, press the latch to open the battery cover.

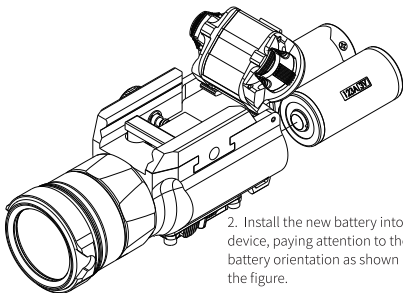


2. Install the new battery into the device, paying attention to the battery orientation as shown in the figure.

3. Close the battery cover until the latch clicks, securing the battery cover in place

Note: Replace all batteries; never mix new and old batteries.

Instructions for Use


To keep the light on, rotate the tail cap switch up or down; rotate it in the opposite direction to turn off the light.

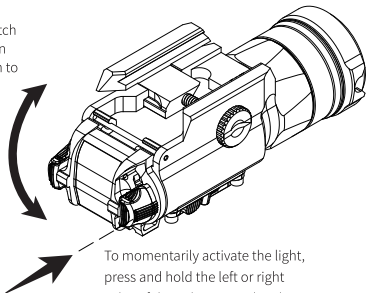

To momentarily activate the light, press and hold the left or right sides of the tail cap switch; release the switch to turn off the light.

Installing a Picatinny rail

1. Unscrew the adjustment bolts counterclockwise to loosen the rail.
2. Push the Picatinny rail forward while keeping the crossbeam in place. Tighten the bolts clockwise until the movable rail overlaps with the "wedge" on the crossbeam and securely locks it into position.

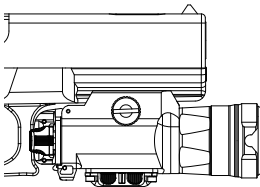



www.fma.hk